


Combi-CamTM ULTRA

MOUNTING CUTOUT



#7440 Installation Instructions:

- Retrofits standard 3/4" cam hole
- Cam can be placed in 180 degree increments (or 90 degrees with dual hole cams)
- Cam lock can be installed vertically or horizontally

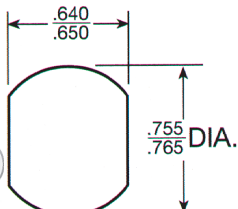

Combination Locker Locks

1. Insert lock body through front of 3/4" drilled hole
*(See below note on stabilizer hole)
2. Note clear, distinct open and close indicators on front of lock
Knob will be turned to 'open' to release lock.
3. Thread cylinder nut and tighten
4. Attach 90 degree stop cam (note that stop cam needs to be placed in position shown in image to right).
5. Attach cam (straight or offset) onto back of lock body
6. Secure with nut and nut washer.



installed horizontally or vertically

Setting Your Own Combination:

- The combination is factory set at all 0's
- Combination must be on opening number prior to resetting.
- On top of lock is code reset button. Press and keep pressed down reset button.
- Set your personal combination by turning dials to desired combination.
- Release reset button and your combination is set.
- To lock, rotate one or more dials after lock is closed.
To open lock, turn dials to your personal combination.

Unlocking Cam Lock Using Key:

- Insert key into lock, rotate key clockwise to unlock symbol




Discovering Combination Using Key:

- Open with master key to unlocked position
- While in the unlocked position, turn each dial until it stops.
- Once all of dials have stopped, current combination has been discovered and can be reset.

Stabilizer Hole

This lock comes with an optional bolt & nut that can be inserted into a stabilizer hole drilled 2" up from center of cylinder hole.

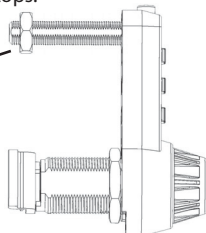

www.combi-cam.com
Innovative, Quality Security Solutions
www.fjmsecurity.com

© 2010 FJM Security Products

Made in Taiwan